



## **EURO PROFILE CYLINDER DIMENSIONS**

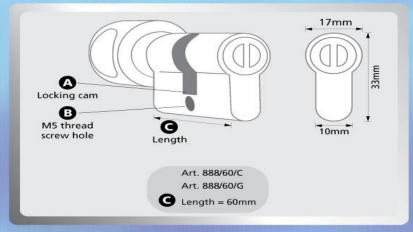


## INSTALLATION INSTRUCTIONS



 Turn locking cam A with knob to align with the cylinder.



2. Insert the cylinder into the lock case till you are able to turn the locking cam.



3. Secure the cylinder with the screw through the lock case hole **D** onto hole **B**.



This cylinder is mostly used on washroom doors where key access is not neccessary.